


STANDARD ARRIVAL CHART - INSTRUMENT (STAR) - ICAO

TRANSITIONAL ALTITUDE
8000'
TRANSITIONAL LEVEL
ATC

RADAR APP S: 124.50 TWR E: 118.60
E: 124.50 W: 118.10
W: 123.70 ATIS: 126.20
DIR: 121.40 : 115.20
ACC N: 126.70 SMC: 121.90

JOHANNESBURG
(O.R. TAMBO INTERNATIONAL)
RNAV (GNSS) RWY 21L
UNPOM 1B

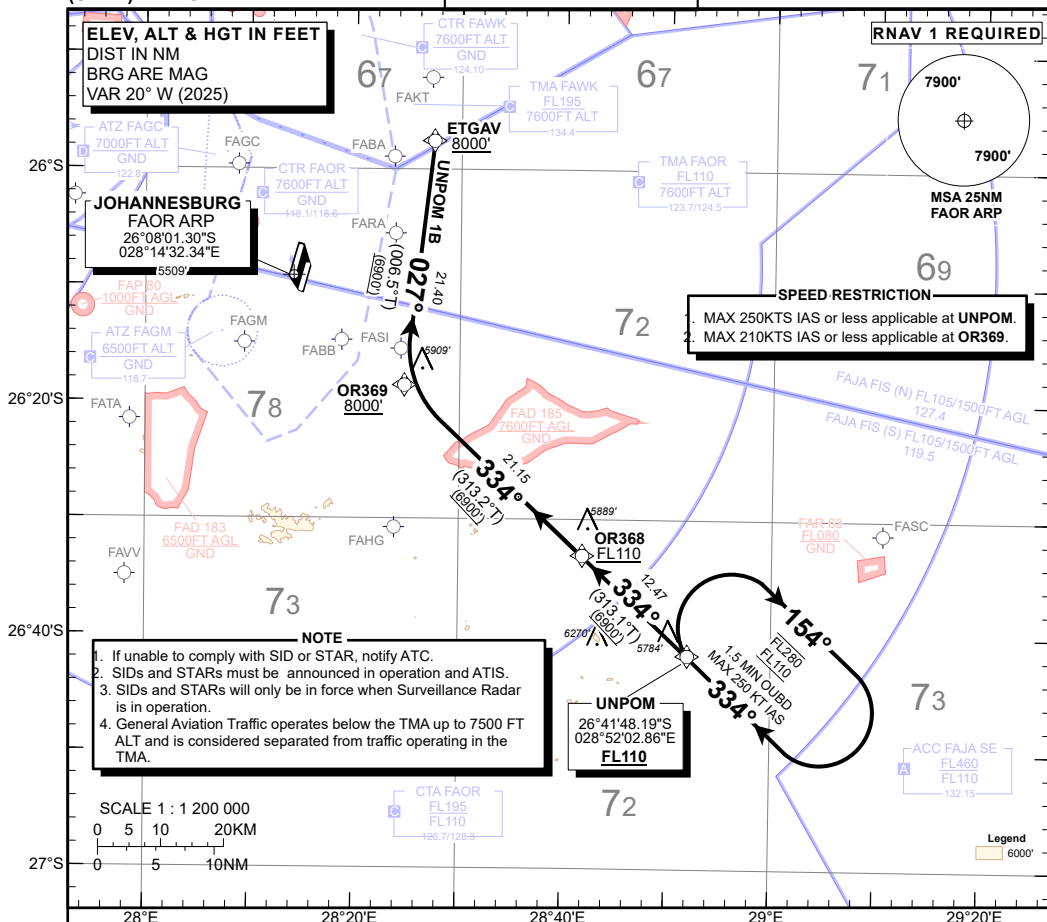

**UNPOM:
RWY 21L**

**To OR368 at or above FL110, to OR369 at 8000FT or above, turn right to ETGAV, at 8000FT or above.
At ETGAV, continue on the RNAV (GNSS) APCH RWY 21L.**

Before UNPOM: Proceed to UNPOM and enter the UNPOM 1B RNAV (GNSS) hold. Hold for 5 minutes at last assigned level (**at or above FL110**). Descend to **FL130** in the hold or maintain last assigned level if below FL130. Leave UNPOM on the "After UNPOM" Communication Failure Procedure.

After UNPOM: Continue on the UNPOM 1B RNAV (GNSS) STAR. At ETGAV, continue on the RNAV (GNSS) APCH RWY 21L.

CHANGE: New Procedure

EFF: 15 MAY 25

SOUTH AFRICAN



CIVIL AVIATION AUTHORITY

ARR-22

ACSP: ATNS