


STANDARD ARRIVAL CHART - INSTRUMENT (STAR) - ICAO

TRANSITIONAL ALTITUDE
8000'
TRANSITIONAL LEVEL
ATC

RADAR APP S: 124.50 TWR E: 118.60
E: 124.50 W: 118.10
W: 123.70 ATIS: 126.20
DIR: 121.40 : 115.20
ACC N: 126.70 SMC: 121.90

JOHANNESBURG
(OR. TAMBO INTERNATIONAL)
RNAV (GNSS) RWY 21L
AVAGO 1D

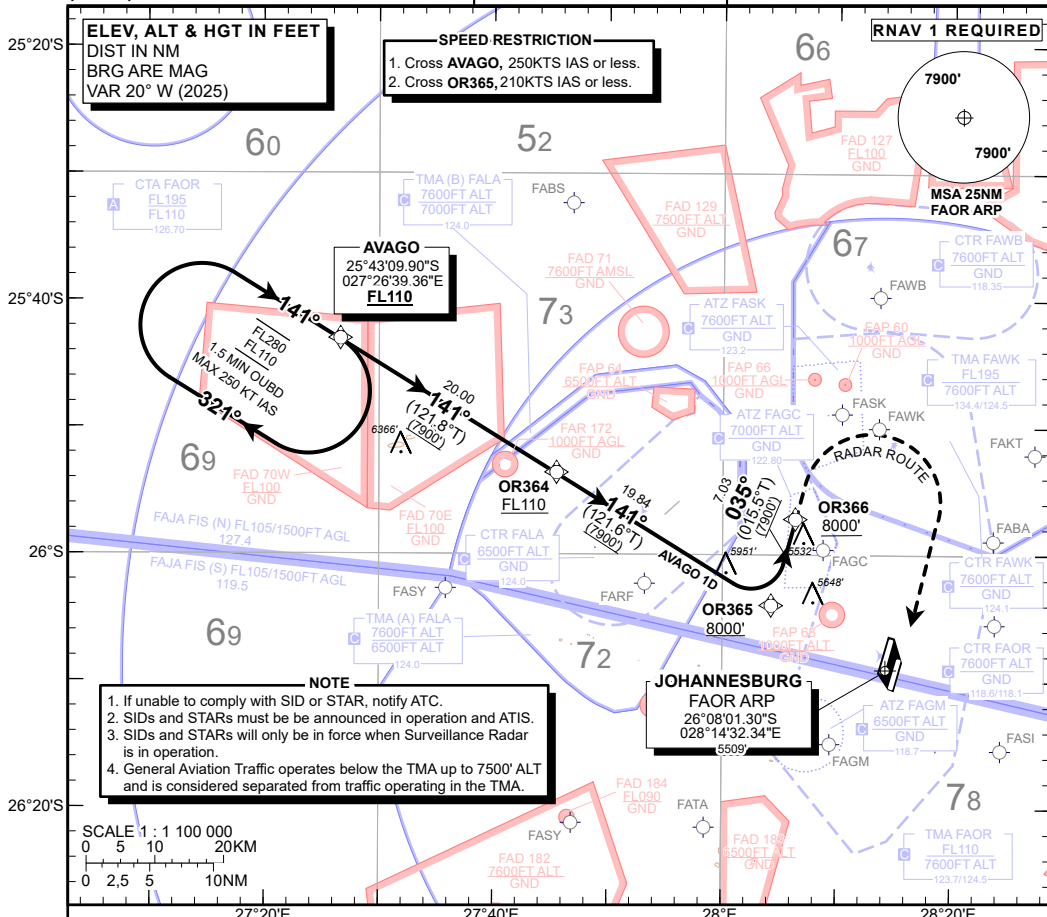

AVAGO 1D: RWY 21L

To OR364 at FL110 or above, to OR365 at 8000FT or above, turn left to OR366 at 8000FT or above. At OR366 continue on track 035°M, expect radar vectors RWY 21L.

COMMUNICATION FAILURE PROCEDURE (Squawk 7600)

Before AVAGO: Proceed to AVAGO and enter the AVAGO 1D RNAV (GNSS) hold. Hold for 5 minutes at last assigned level (at or above FL110) Descend to FL130 in the hold or maintain last assigned level if below FL130. Leave AVAGO on the "After AVAGO" Communication Failure Procedure.

After AVAGO: Continue on the AVAGO 1D RNAV (GNSS) STAR. At OR366 to UVLOG. At UVLOG, continue on the RNAV-02 APCH RWY 21L.

Maintenance (Waypoints: OR364, OR365, OR366),
CHANGE: Hold direction, ARP Elevation).

