


STANDARD ARRIVAL CHART - INSTRUMENT (STAR) - ICAO

TRANSITIONAL ALTITUDE
8000'
TRANSITIONAL LEVEL
ATC

RADAR APP S:124.50 TWR E:118.60
E:124.50 W:118.10
W:123.70 ATIS:126.20
DIR:121.40 :115.20
ACC N:126.70SMC:121.90

JOHANNESBURG
(O.R. TAMBO INTERNATIONAL)
RNAV (GNSS) RWY 03R
OKPIT 1C

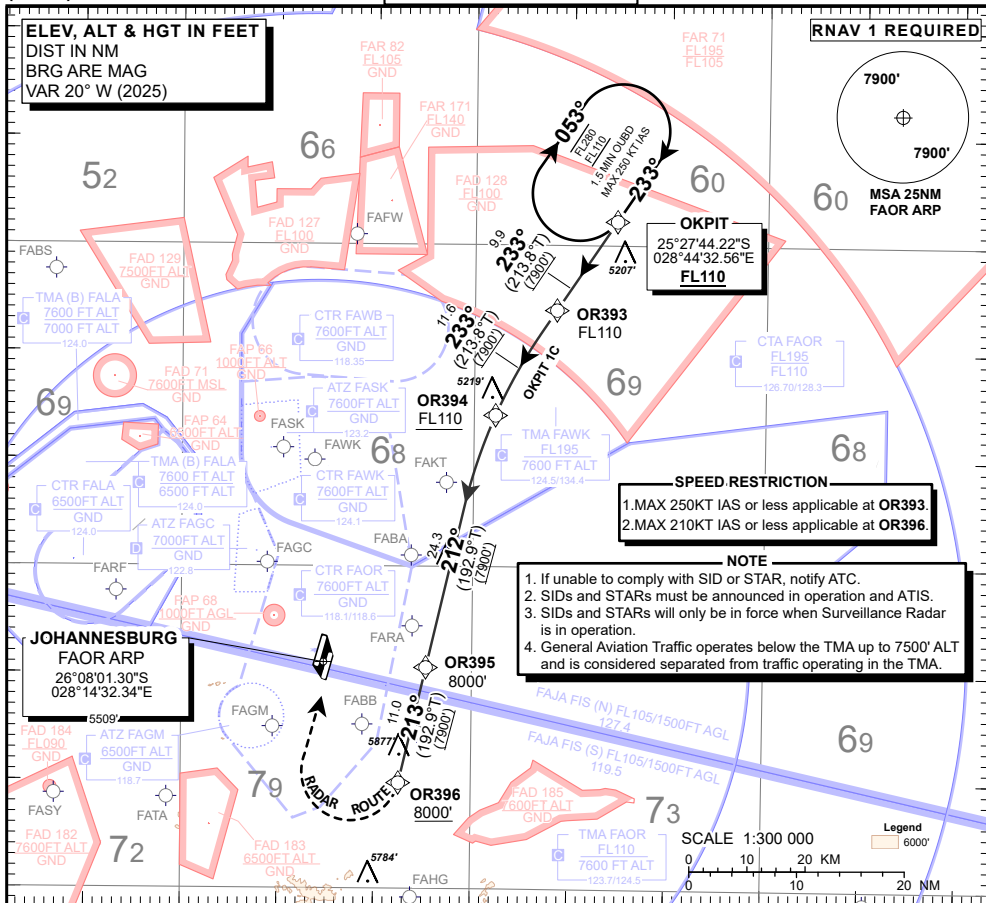

**OKPIT 1C:
RWY 03R**

To OR393, to OR394 at FL110 or above, to OR395, to OR396 at 8000FT or above. At OR396 continue on track 213° M, expect radar vectors RWY 03R.

COMMUNICATION FAILURE PROCEDURE (Squawk 7600)

Before OKPIT: Proceed to OKPIT and enter the OKPIT 1C RNAV (GNSS) hold. Hold for 5 minutes at last assigned level (**at or above FL110**). Descend to **FL130** in the hold or maintain last assigned level if below FL130. Leave OKPIT on the "**After OKPIT**" Communication Failure Procedure.

After OKPIT: Continue on the OKPIT 1C RNAV (GNSS) STAR. At OR396 to ETLIG. At ETLIG, continue on the RNP APCH RWY 03R.

CHANGE: New Procedure

ACSP: ATNS

